

Glowball Instructions

Power - All colors are powered by 4 LR-54 batteries per ball EXCEPT red and orange which use 2 LR-44 batteries per ball.

Battery Replacement

1. Remove the battery cover by turning it counter-clockwise until it is free of the ball.
2. Remove the batteries by turning the ball over and shaking gently.
3. Insert new batteries with the positive (+) side facing up (toward the battery cover). The smaller side of the battery should be toward the inside of the ball.
4. Replace the battery cover and tighten (clockwise) until the ball turns on.

NOTE! Make sure the cover is threaded properly to avoid damaging the threads. If the cover does not turn easily, back it out and try again.

Cleaning - Use mild soap and a damp cloth. Do not immerse the balls in water.