

Glowing Instructions

Power - All colors are powered by 4 CR-2016 batteries per ring (2 per LED unit) EXCEPT red, orange, and Fire which use 2 CR-2032 batteries per ring (1 per LED unit).

Battery Replacement

1. Loosen the screw holding the battery cover by turning it counter-clockwise. It is not necessary to remove the screw. With the switch facing you, the screw is on the right-hand side of the cover.
2. Open the battery cover to expose the wafer batteries. The cover will not open completely but there should be enough room to remove the batteries. BE GENTLE!
3. Using a small pair of pliers, remove the batteries from the ring. Install new batteries with the smaller part facing the switch.
4. Lower the battery cover and tighten the screw just until it is snug. Over-tightening will strip the threads and prevent the cover from fitting properly. BE GENTLE!

Cleaning - Use mild soap and a damp cloth. Do not immerse the rings in water.