

Glow Staff Instructions

Assembly - For 2-piece staves, insert the end pieces into the clear center section and adjust length as desired. Secure the ends by rolling the soft material at each end of the center section back over itself as far as you can using only your fingers. Do not over-stretch the material! This should provide a secure fit and keep the end sections from sliding out during use.

Power - To activate the LED units, tighten the battery cover by turning it clockwise until the LED unit comes on. All colors are powered by 4 LR-54 batteries per LED unit EXCEPT red and orange which use 2 LR-44 batteries per unit.

Battery Replacement

1. Remove the battery cover by turning it counter-clockwise until it is free of the LED unit.
2. Turn unit hole-side down and shake gently to remove batteries.
3. Insert new batteries with the positive (+) side facing up (toward the battery cover). The smaller side of the battery should be toward the inside of the LED unit.
4. Replace the battery cover and tighten (clockwise) until the LED unit turns on.

NOTE! Make sure the cover is aligned properly to avoid damaging the threads. If the cover does not turn easily, back it out and try again.

Caring For Your Staff

Avoid excessive heat - Your staff is made of a thermoplastic and will soften & bend if you get it too warm. Don't leave your staff in your car on a warm day or store it in direct sunlight or near a heat source.

Storage - Your staff is made of a flexible material that will bend if not properly stored. Be sure to store your staff either completely upright or lying down where it will be fully supported. You may want to store it in the mailer it came in.

Cleaning - Use mild soap and a damp cloth. Do not immerse the LED units in water.